



INSTALLATION MANUAL

Thank you for your purchase!

By choosing a **Himalia-Mobilia** product, you have opted for quality, durability, and local craftsmanship.

By purchasing furniture made in Quebec, you are not only supporting the local economy but also helping to reduce your environmental footprint. Thanks to you, local artisans and workers can continue doing what they do best: creating carefully crafted products that are made to last.

Thank you for being part of the change. Thank you for choosing local.

The Himalia-Mobilia team.



christian marcoux
cuisine et mobilier design

MANUFACTURING PARTNER

BEFORE STARTING INSTALLATION

IMPORTANT

This bathroom vanity is sold without a countertop or sink.

Please refer to the manufacturer's specifications before proceeding with installation.

The following points require special attention:

- Make sure the countertop overhangs the vanity by at least $\frac{1}{4}$ " at the front and sides.
- Confirm that the rough plumbing outlets align with the openings provided at the back of the vanity.
- Ensure that the sink/basin has enough clearance inside the vanity to allow proper operation of the upper drawers.



Compliance with standards:

Make sure to comply with all applicable building codes and regulations.

Advice to the user:

For safe and secure installation, we recommend entrusting the installation of your product to a qualified professional. This will ensure optimal operation and maximum durability of your investment.

Intended use:

This bathroom vanity is designed exclusively for residential use.

Using the product for purposes other than intended voids the warranty.

Inspection upon receipt:

Upon receiving the product, carefully open the packaging and inspect the furniture to ensure it has not been damaged during transport.

If any issue is found, contact the retailer immediately. Until installation, keep the furniture in its original packaging, in a dry and secure place.



Recommendation: Since the product is quite heavy and bulky, it is best to handle it with two people for increased safety and ease.

INSTALLATION STEPS

CAUTION

- Read the instructions carefully before use to prevent any risk of fire, electric shock, or injury. Keep this manual for future reference.
- Please consult the technical drawings to plan precisely the final placement of your vanity. Carefully determine the plumbing positioning before starting any work, and make sure it is well centered with respect to the rear opening of the vanity.

RECOMMENDED TOOLS



Measuring tape



Square screwdriver



Safety glasses



Saw



Hole saw bit



Pencil



Caulking gun



Drill



Square



Stud finder



24" level
(minimum length)




Wooden blocks
to support the vanity


WALL PREPARATION

1. Make sure the floor and walls are square and level.
2. Determine the placement of the vanity and plan its position according to the rough plumbing outlets.
3. Ensure there is a solid nailing surface to allow secure fastening of the supplied support.
The support must be anchored directly into wood studs (2" x 4" or 2" x 6") spaced no more than 16 inches on center (c/c)."
4. For installation on metal studs, reinforcement is required using plywood panels or solid wood panels securely fastened between the studs, at the location planned for the vanity.

**Example for a vanity installed
on an interior wall**

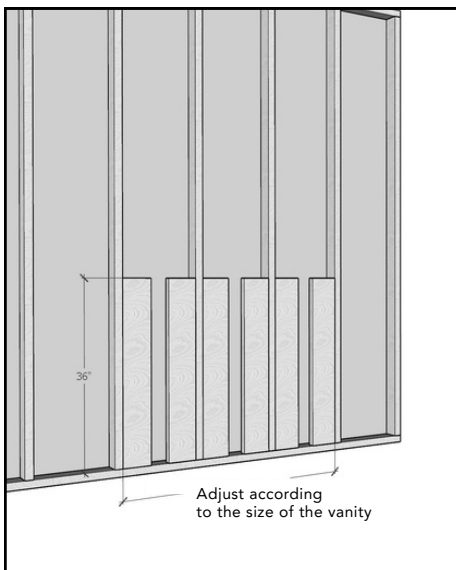

**Example for a vanity installed
on an exterior wall**


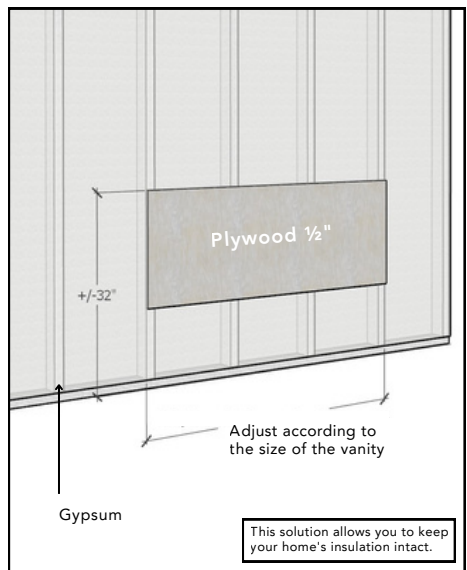


INSTALLATION



STEP 1

1. Carefully remove the entire unit from its packaging, thoroughly inspect the vanity, and report any irregularities or damage found.
2. Remove the drawers and place them on a flat, protected surface.

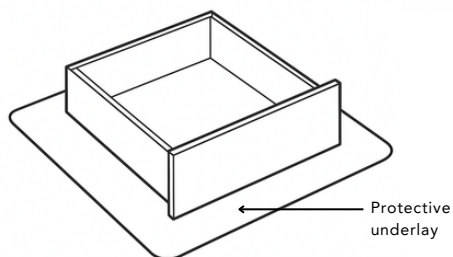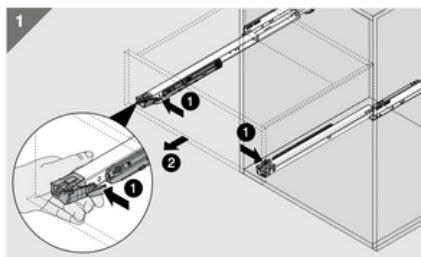

STEP 2



1. Plan the final height of the vanity by subtracting the thickness of the countertop.

***Does not apply to the Romy model.**

2. Determine the positioning of the rear support bracket (piece with the 45° angle).

The top of the angle should be approximately 2-3/8" below the top of the vanity.


Note: During the manufacturing of the support bracket, dimensions may vary from one piece to another.

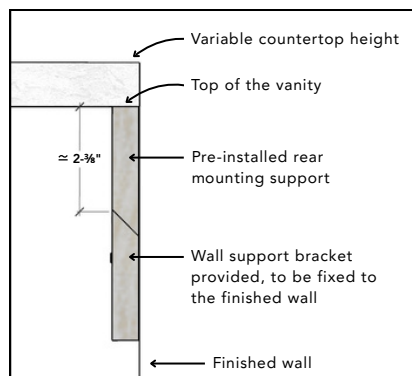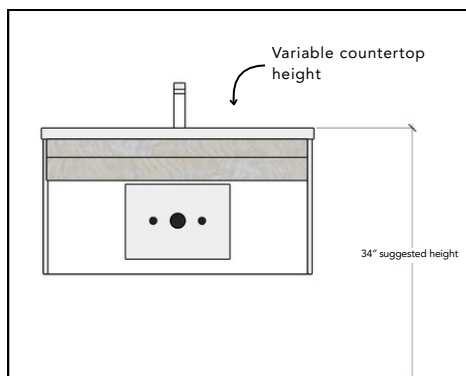

STEP 3

Wall bracket installation


1. Measure the bracket to ensure it fits perfectly at the back of the vanity.
2. Check that the bracket is well centered in relation to the vanity.
3. Locate the wall structure and mark the fixing points on the bracket.
4. Drill and countersink the holes in preparation for screw installation.
5. Install the wall bracket level and secure it using 3" No10 wood screws (not included).

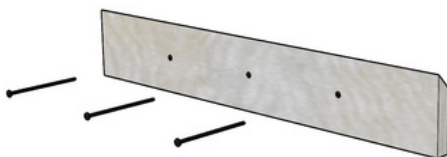



STEP 4

Final installation of the vanity

1. Apply a silicone bead along the entire surface of the wall bracket before permanently fixing the vanity.
2. With the help of another person, position the vanity on the bracket and check the level and final placement one last time.
3. The vanity must also be fixed to the back wall using additional anchors or screws.
Check where the wall studs or nailing strip are located.
4. Pre-drill and countersink holes through the back of the vanity to insert 3" No10 screws.
Tighten firmly without applying too much pressure to avoid deforming the back of the vanity.
5. Do a final check for squareness and level before installing the drawers.



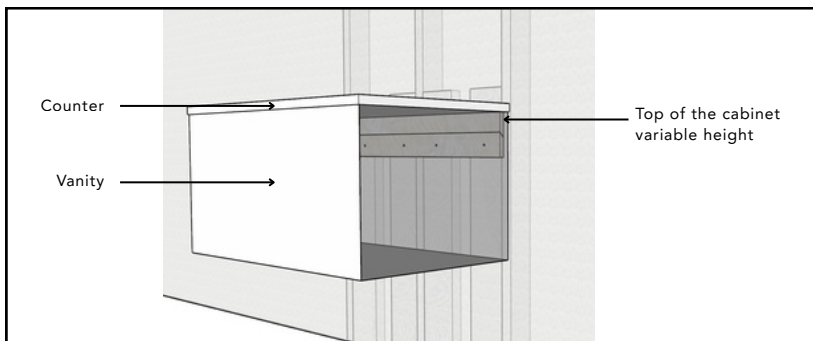


DRAWER FRONT ADJUSTMENTS

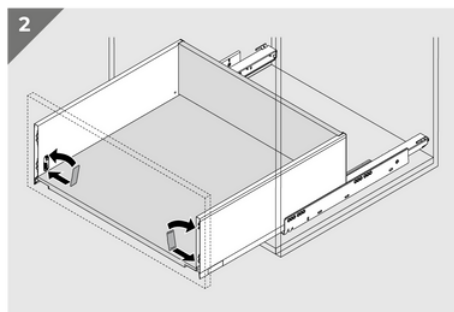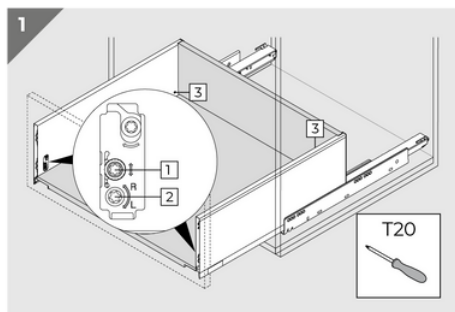

i

KB $\geq$ 600 mm

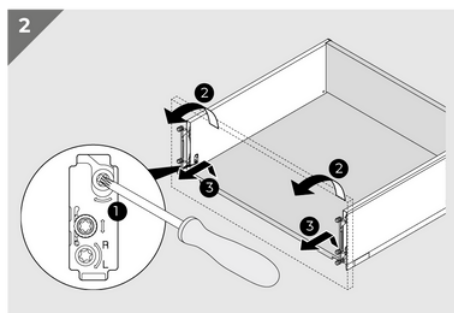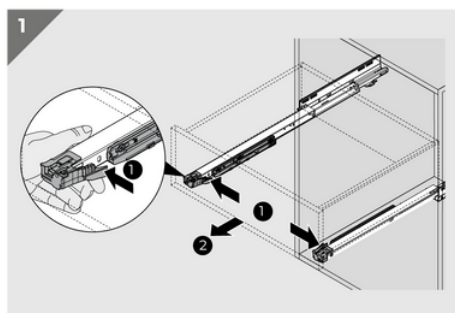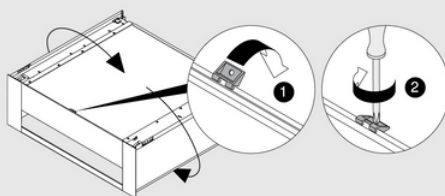

COUNTER INSTALLATION

(NOT INCLUDED)

Please refer to the installation manual provided by the countertop manufacturer to complete the installation. It is essential that the vanity is securely fixed to the wall structure to support the weight of the countertop.

IMPORTANT REMINDER

This bathroom vanity is sold without a countertop or sink. Please consult the manufacturer's specifications before proceeding with installation.

The following points require particular attention:

- Ensure that the countertop overhangs the vanity by at least ¼" at the front and on the sides.
- Confirm that the rough plumbing outlets match the openings at the back of the vanities.
- Make sure the sink/basin allows enough clearance inside the vanity to ensure proper operation of the upper drawers.



Himalia-Mobilia declines all responsibility regarding countertops that are incompatible with the design of the vanity.

CARE AND CLEANING



Clean with lukewarm water and mild soap, then wipe with a dry cloth.



Avoid any contact with chemical products.



Quickly remove any dirt or residual moisture.



Direct exposure to sunlight may cause premature discoloration of the finish.



Keep the bathroom furniture away from direct heat sources, such as radiators.



WARRANTY TERMS

HIMALIA-MOBILIA products and accessories are covered by a limited one (1) year warranty against manufacturing or material defects. This warranty takes effect from the date of purchase and is valid only for the original purchaser and for residential use only.

Drawer mechanisms benefit from a limited lifetime warranty.

Replacement parts for drawer mechanisms as well as furniture, vanities, and accessories from **HIMALIA-MOBILIA** covered by the warranty will be replaced (at the distributor's discretion) with a product of similar value. Removal and installation, as well as transport, are not included.

To submit a claim, please refer to your retailer or contact **HIMALIA-MOBILIA** directly (info@himalia.ca) within the prescribed time frame.

To ensure fast and efficient processing, please include the following information with all claims:

- Reason for the claim
- Proof of purchase, reference and product description
- Photos showing the problem

Cancellation Clause

Please note that no warranty applies in any of the following cases:

- Installation for commercial or industrial purposes.
- Improper installation or installation not in accordance with the product installation manual.
- Product not suitable for the existing building structure.
- Modification or alteration of the product.
- Negligence, misuse, or poor maintenance.
- Exposure to sudden temperature changes, direct heat sources, water, or humidity*1.
- Storage in an environment where temperature or ventilation is not appropriate*2.
- Natural disasters or any other case of force majeure, unforeseen or uncontrollable events.










*1 **HIMALIA-MOBILIA** products must be kept in an environment where the relative humidity is between 45% and 65%. An inadequate humidity level may cause damage and void the warranty.

*2 Adequate air circulation and the addition of a humidity exhaust system are required to validate this warranty.

TECHNICAL DRAWINGS

BACKS OF VANITIES


Back of Ariel vanity

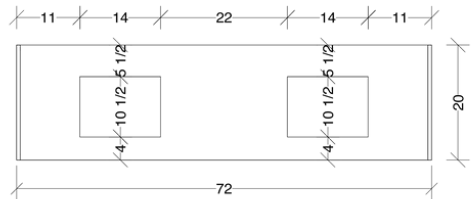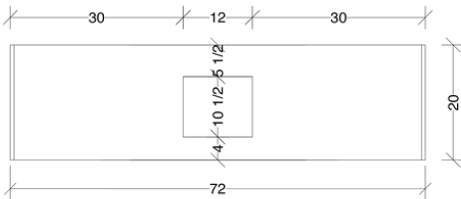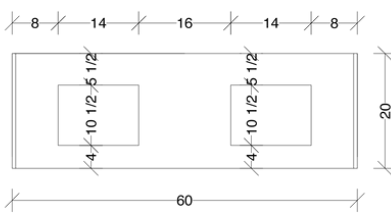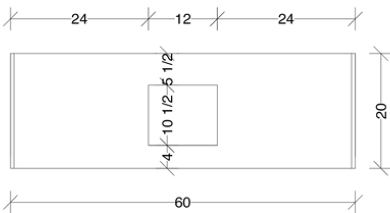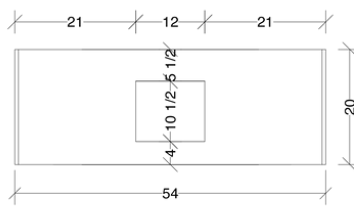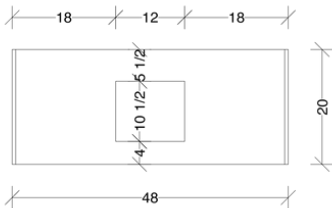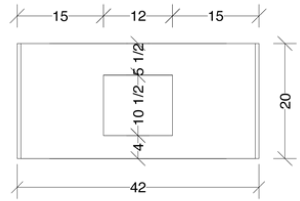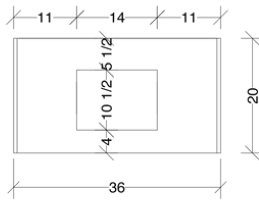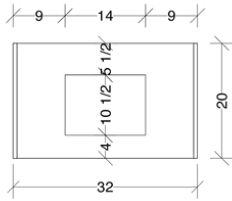

TECHNICAL DRAWINGS

BACKS OF VANITIES


Back of Romy vanity

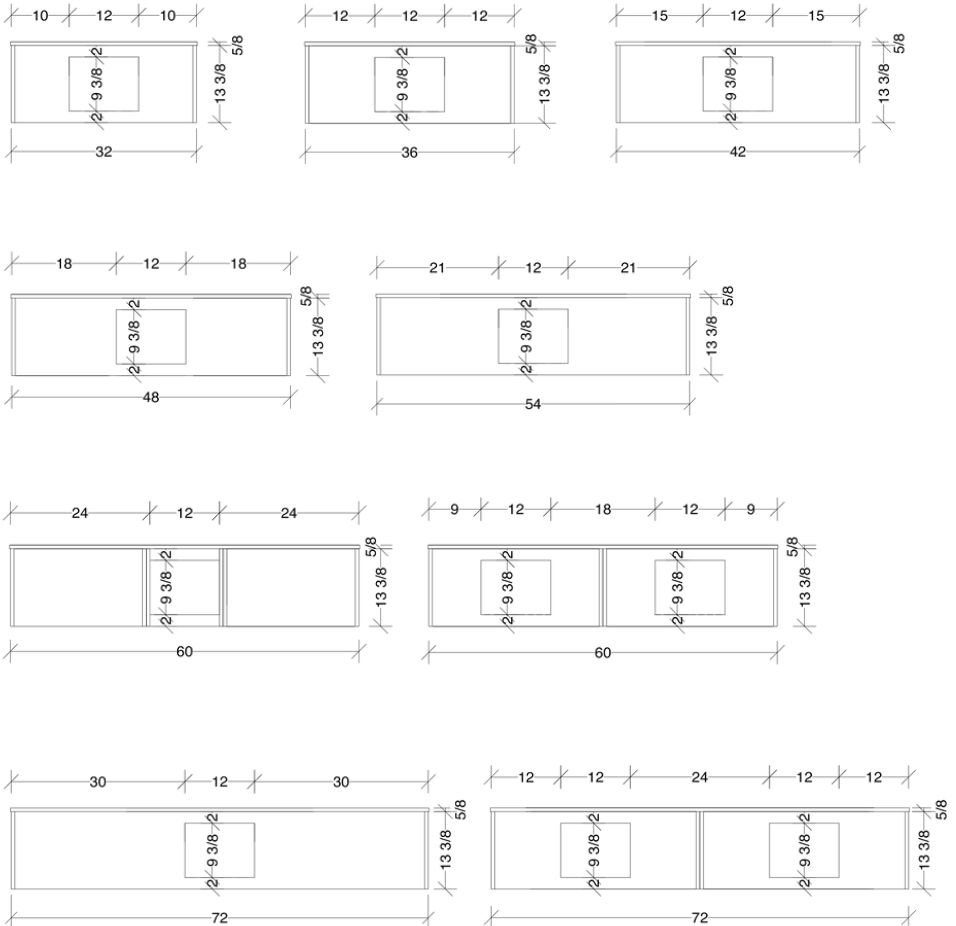


TECHNICAL DRAWINGS

BACKS OF VANITIES

Back of Mila vanity

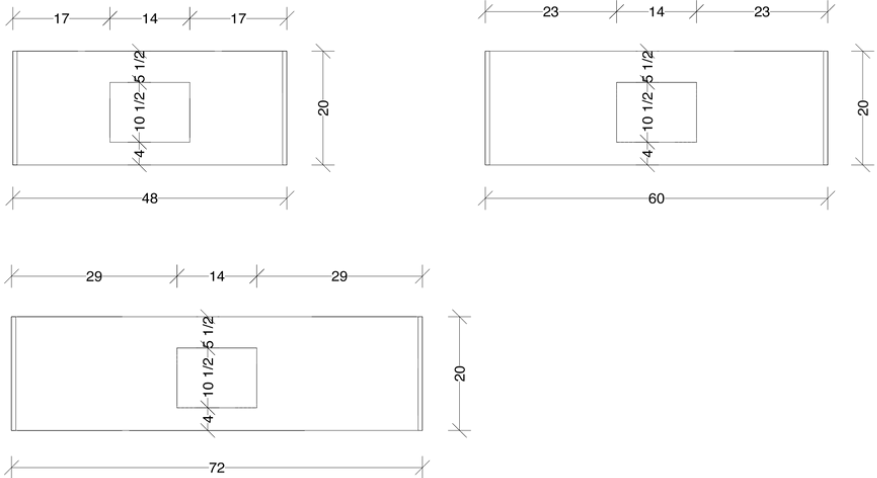

Back of Sofia vanity

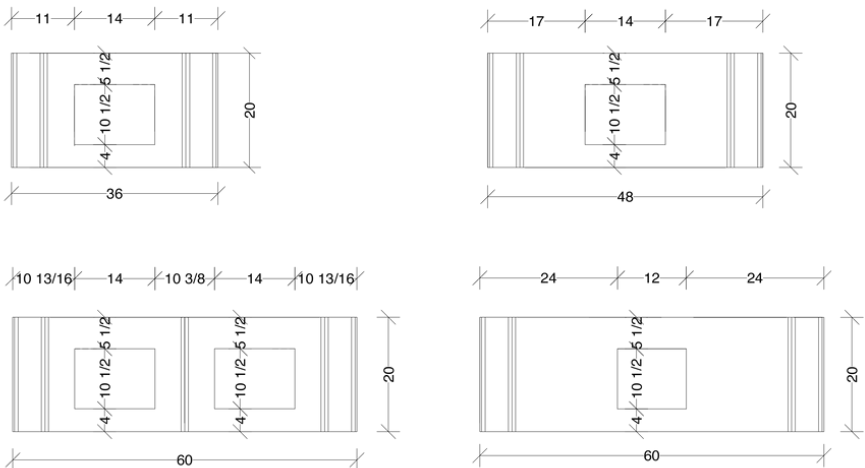

Other options will be available soon.
Keep sending us your requests, we are always listening.



CARE AND CLEANING



Clean with lukewarm water and mild soap, then wipe with a dry cloth.



Avoid any contact with chemical products.



Quickly remove any dirt or residual moisture.



Direct exposure to sunlight may cause premature discoloration of the finish.



Keep the bathroom furniture away from direct heat sources, such as radiators.



CONTACT US



1-800-HIMALIA
1-866-446-2542



info@himalia.ca



www.himalia.ca